LBB 4442/00 Line Supervision Set

www.boschsecurity.com







- ► Loudspeaker line monitoring without additional cabling
- ▶ Supervision-master mounting in the power amplifier
- Supervision-slave mounting at the end of the loudspeaker line
- ▶ Open-circuit fault detection
- ▶ Compatible with 100 V and 70 V loudspeaker lines

The Praesideo system uses a unique loudspeaker line monitoring principle, which requires no additional cable. The loudspeaker line itself is used to communicate with the supervision-slave installed at the end of the loudspeaker line.

The LBB 4442/00 contains the master and slave device for supervision of a single loudspeaker line. For supervision of multiple loudspeaker line branches and loudspeakers, the use of the LBB 4440/00 Supervision Control Board in conjunction with the LBB 4441/00 and LBB 4443/00 Supervision Boards is recommended.

Functions

Each amplifier channel in an LBB 442x/x0 or PRS-xPxxx Power Amplifier unit has an internal mechanical and electrical provision for an LBB 4442/00 master board. The slave board fits into the Bosch range of loudspeakers and can be mounted in the last speaker in the line, or in a separate housing at the end of the line. The short-to-ground and short-circuit detection for the lines are incorporated in the power amplifier. Line faults are detected and reported within 100 s. The pilot tone generator for speaker monitoring is generated in the amplifier and powers the slave unit. Line monitoring can be switched on and off from the configuration software.

Interconnections

- · 20-pin flat cable connector (master)
- Two screw terminals (slave)

Certifications and approvals Safety acc. to IEC 60065 / EN 60065 Immunity acc. to EN 55103-2 / EN 50130-4 / EN 50121-4 Emissions acc. to EN 55103-1 / FCC-47 part 15B Emergency acc. to EN 60849 / EN 54-16 / ISO 7240-16 Maritime acc. to IEC 60945

Region	Certification	
Europe	CPR	EU_CPR
	CE	
	CE	COC
	CE	CertAlarm
	CE	DOP
	GL	
Poland	CNBOP	

Installation/configuration notes

The following loudspeakers have a provision for installing a supervision board:

Ceiling loudspeakers	Column loudspeakers	Sound projectors
LC1-WM06E	LBC 3210/00	LBC 3432/02
LC1-UM06E	LA1-UM20E-1	LS1-OC100E-1
LC1-UM12E	LA1-UM40E-1	
LC1-UM24E	Horn loudspeakers	
LBC 3510/40	LBC 3403/16	
LBC 3520/40	LBC 3404/16	
LBC 3530/40	LBC 3405/16	
Cabinet loudspeakers	LBC 3406/16	
LBC 3011/41	LH1-10M10E	
LBC 3011/51	LBC 3482/00	
LB1-UM06E-1	LBC 3483/00	
LBC 3018/01	LBC 3484/00	
LB1-UM20E-D/L	LH1-UC30E	
LB1-UM50E-D/L		
LB3-PC250		
LB3-PC350		

Technical specifications

Mechanical

Slave	
Dimensions (H x W X D)	16 x 80 x 60 mm (0.6 x 3.1 x 2.3 inch)
Weight	50 g (1.7 ounces)
Mounting	2 screws
Master	
Dimensions (H x W X D)	17 x 60 x 50 mm (0.7 x 2.3 x 2 inch)
Weight	30 g (1.1 ounces)
Mounting	Internally in all Praesideo Power Amplifiers

Environmental

Operating temperature	-5 °C to +55 °C (+23 to 131 °F)
Storage temperature	-20 °C to +70 °C (-4 to 158 °F)
Humidity	15% to 90%
Air pressure	600 to 1100 hPa

Ordering information

LBB 4442/00 Line Supervision Set

Master and slave PCB for supervisiing a single loudspeaker line, the master is mounted in a Praesideo network connected power amplifier (one per channel), the slave is connected at the end of the loudspeaker line.

Order number LBB4442/00

Accessories

LBB 4446/00 Set of Supervision Board Brackets (10 pcs)

Aluminum brackets for mounting supervision slave boards in a loudspeaker cabinet or cable box (set of 10 pieces).

Order number LBB4446/00

Represented by:

Americas:

Americas: Bosch Security Systems, Inc. 12000 Portland Avenue South Burnsville MN 55337, USA Phone: +1-800-392-3497 Fax: +1-800-955-6831 audiosupport@us.bosch.com www.boschsecurity.com

Europe, Middle East, Africa:

Bosch Security Systems B.V. P.O. Box 80002 P.O. Box 80002 5617 BA Eindhoven, The Netherlands Phone: + 31 40 2577 284 Fax: +31 40 2577 330 emea.securitysystems@bosch.com www.boschsecurity.com

Asia-Pacific:

Asia-Pacific:
Robert Bosch (SEA) Pte Ltd, Security
Systems
11 Bishan Street 21
Singapore 573943
Phone: +65 6571 2808
Fax: +65 6571 2699
apr.securitysystems@bosch.com
www.boschsecurity.asia

China:

China:
Bosch (Shanghai) Security Systems Ltd.
201 Building, No. 333 Fuquan Road
North IBP
Changning District, Shanghai
200335 China
Phone +86 21 22181111
Fax: +86 21 22182398 www.boschsecurity.com.cn

America Latina:

America Latina:
Robert Bosch Ltda Security Systems Division
Via Anhanguera, Km 98
CEP 13065-900
Campinas, Sao Paulo, Brazil
Phone: +55 19 2103 2860
Fax: +55 19 2103 2862
latam.boschsecurity@bosch.com
www.boschsecurity.com