

# AMAX 4000 Kits

[www.boschsecurity.com](http://www.boschsecurity.com)



**BOSCH**

Invented for life



- ▶ 64 zones / 16 areas / 250 user codes
- ▶ On-board voice dialer
- ▶ Macro functionality
- ▶ USB direct connection
- ▶ Mobile app functionality

The AMAX panel kits include one panel and one communicator.

The panel is available with the following language packages:

Language package 1: English, Polish, Turkish, Hungarian

Language Package 2: French, German, Dutch, Portuguese

Language Package 3: English, Spanish, Polish, Swedish

Language Package 4: Italian, Greek

The following communicators are available:

- B426-M Ethernet communication module, mobile
- B450-M Plug-in communicator interface, mobile with B442 Plug-in cellular module, GPRS
- B450-M Plug-in communicator interface, mobile with B443 Plug-in Cellular, HSPA+ (3G+)

## **AMAX panel 4000**


This hybrid panel is designed for residential and small to medium-sized businesses. It offers 64 zones and 16 areas and comes with an enclosure and a transformer. An on-board PSTN dialer transmits an alarm via the common telephone network to a phone and / or a communication center while at the same time a voice message is sent to the owner's landline or mobile phone to inform him about an intruder's presence.

Commissioning the system is simple and involves minimum programming: the default settings already cover 90 % of the available functionality. Programming can either be done via the AMAX TEXT, LCD and LED keypads or via the programming software (A-Link Plus).

The intrusion system can be used with both RADION wireless peripherals, operating at 433 Mhz and hardwired detectors from Bosch.

## System overview

### AMAX panel 4000

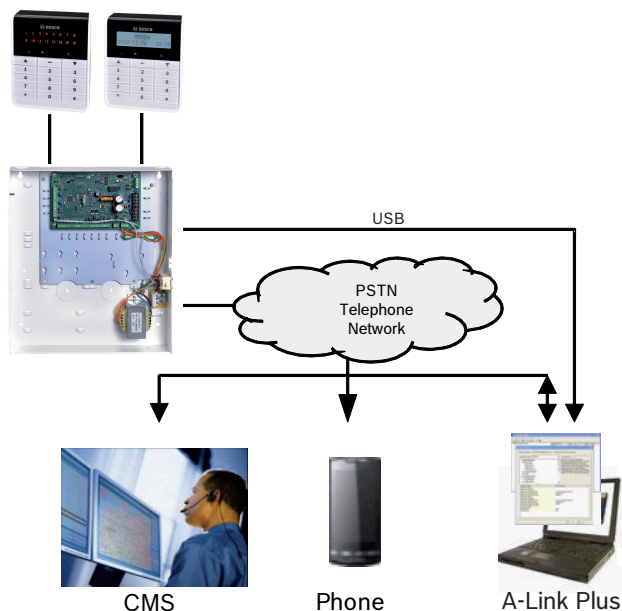

## Functions

### AMAX panel 4000

#### Basic functions

- Keypad code STAY / AWAY arming
- One button STAY / AWAY arming
- On-board dialer with CID / SIA transmission format. Voice dialer transmits up to 4 recorded messages to landline/mobile phones in case of an alarm. Messages can be recorded with A-Link Plus and sent to the control panel with the remote programming software A-Link Plus
- 16 weekly schedules with the option to add exceptions in the calendar
- 3 programmable macros: several single functions from the keypad are combined to one customer macro function, can be executed by pressing one button
- Remote maintenance operations (e.g. walk test, bypassing)
- Installer can enable the service mode for comfortable programming without having alarms or outputs triggered
- In multi-area set-up (direct and multiple arming), "area status" is displayed
- Area name is displayed on the master or area text keypad
- 4 on-board outputs (two monitored)
- Up to three output event types can be configured for one physical output
- Every zone except zone 1 can be used with four-wire fire detectors
- Any zone can be used for chime mode (door bell)
- Any zone can be used to detect a sensor tamper (DEOL)

- Zones can be bypassed by name
- Test mode for outputs and zones

#### Optional functions

- Wireless devices (433 MHz) RADION from Bosch
- Zone inputs on extension modules (with DX2010)
- Relay outputs on extension modules (with DX3010)
- Connect outdoor sirens and IP cameras to an optional 8 relay module (DX3010)
- Programming key
- Arming, bypassing, isolating, operating outputs and inquiry with the RSC+ app on mobile devices (with the B426-M or the B450-M with B442 or B443 modules)

#### Optional alarm transmission

- IP communication with Bosch Conettix IP, SIA DC09 UDP and SIA DC 09 TCP protocols via B426-M and B450-M with B442 or B443 modules
- GPRS communication with Bosch Conettix IP, SIA DC09 UDP and SIA DC 09 TCP protocols via B450-M with B442 or B443 modules

#### Optional remote programming via A-Link Plus

- IP communication (B426-M and B450-M with B442 or B443 modules)
- GPRS communication (B450-M with B442 or B443 modules)

#### Communication with Bosch Software Packages

The AMAX system can communicate with the following software packages:

#### Remote programming software A-Link Plus

The AMAX system can be accessed and programmed via the remote programming software A-Link Plus. All control panel and status information are accessible and an operation of the AMAX panel from a remote location is possible.

A-Link Plus can connect to the AMAX panel via USB, IP or modem.

#### Compatibility information

Basic	
PSTN communicator (integrated)	Formats: Contact ID, SIA DC 03
Magnetic contacts	All magnetic contacts, including recessed, terminal connection, miniature over-head door, and surface mount.
Intrusion detectors	All conventional intrusion detectors, including Blue Line, seismic, PIR, TriTech, photoelectric and TriTech PIR Microwave.
Four-wire smoke detectors	Conventional 12V smoke, heat and photoelectric smoke detectors.
Optional	

Zone	DX2010 zone input module
Relays	DX3010 output module
IP communicator	B426-M and B450-M with B442 or B443 modules
GPRS/GSM communicator	B450-M with B442 or B443 modules
Wireless devices	All RADION devices

Assorted literature is available. Refer to the appropriate datasheet, brochure, and installation manuals for additional data.

Availability varies according to sales region.

### RSC+ mobile app functionality

The RSC+ app provides remote access to the control panel with a mobile device. The following functions are possible:

- Arming
- Force arming
- Disarming
- Bypassing/unbypassing
- Isolating/unisolating
- Operating outputs
- Status inquiry
- Event/history inquiry

### RSC+ compatibility

The RSC+ app can be used for Android v5.0 and higher.

The RSC+ app can be used for iOS v9.0 and higher.

### RSC+ push notifications

Per default, push notifications for alarms are sent.

Additionally, push notifications for system events and fault/trouble events can be switched on.

## Regulatory information

Region	Regulatory compliance/quality marks	
Germany	VdS	H113018 [AMAX panel 4000 EN, IUI-AMAX4-TEXT, IUI-AMAX3-LED8, IUI-AMAX3-LED16]
Europe	CE	EMC, LVD, RoHS [AMAX panel 4000 EN, AMAX panel 3000 BE]
	CE	AMAX panel 4000, AMAX Panel 3000-BE
Belgium	INCERT	B-509-0063 B [ICP-AMAX4-P2, ICP-AMAX4-P3, ICP-AMAX3-P2]
Sweden	SBSC	13-387 [AMAX panel 4000 EN]

## Technical specifications

### AMAX panel 4000

#### Electrical

Power supply type	EN = A
Transformer	

Transformer input in VAC	230
Transformer output in VAC	18
Transformer AC power in VA	50
Transformer fuse in mA	1000

#### AC input

Minimum operating voltage in VDC	195
Maximum operating voltage in VDC	253
Line voltage frequency in Hz	50

#### DC output

DC output maximum current for all components in mA	2000
DC output maximum current for all components: dependency on battery	<ul style="list-style-type: none"> <li>• Battery 7Ah standby 12h (recharge Batt 80% in 72h) = 550mA</li> <li>• Battery 7Ah standby 36h + 15min alarm current 500mA (recharge Batt 80% in 72h) = 150mA</li> <li>• Battery 18 Ah standby 12h (recharge Batt 80% in 72h) = 1500mA</li> <li>• Battery 18Ah standby 36h (recharge Batt 80% in 24h) = 480mA</li> <li>• Battery 18Ah standby 36h + 15min alarm current 1000mA (recharge Batt 80% in 24h) = 400mA</li> </ul>

#### Aux 1 / 2 output

Aux 1 / 2 output voltage	+12V / GND
Aux 1 / 2 nominal output voltage under AC line input in VDC	13.8 (+3% / -5%)
Aux 1 / 2 output max. Vpp in mV	675
Aux 1 / 2 output voltage range under AC line input in VDC	13.11 - 14.2
Aux 1 / 2 output current in mA at 25°C	900

#### Outputs

PO -1 / PO -2 maximum supervised output current in mA	500
PO +3 / PO +4 maximum current in mA (+12V)	750
Watchdog PO -5 maximum current in mA	100

**Option bus**

Option bus nominal output voltage under AC line input in VDC	13.8 (+3% / -5%)
Option bus output voltage range under AC line input in VDC	13.11 - 14.2
Option bus 1 maximum current in mA at 25°C	900
Option bus 2 maximum current in mA at 25°C	900
Panel PCB maximum quiescent current in mA	100

**Battery**

Battery type	12 V / 7Ah / 12 V / 18 Ah Bosch IPS-BAT12V-18AH
Low battery condition in VDC	below 11.0
Minimum battery condition in VDC	10.8

**Frequency bands of operation****Power level for radio equipment**

GSM900	Class 4 (2W) - GPRS Class 33
GSM1800	Class 1 (1W) - GPRS Class 33
UMTS2100	Class 3 (0.25W)

**Mechanical**

Dimension in cm (H x W x D)	37.5 x 32.2 x 8.8
Weight in g	4700

**Panel features**

Number of zones	64
Number of on-board zones	16
Number of users	250
Number of events	256 history events, stamped with time, and date 256 EN history events, stamped with time, and date 256 dialer history events, stamped with time, and date
Pin code variations	1000000

**Number of devices**

Number of keypads	16
Number of DX 2010 modules	6
Number of DX 3010 modules	2
Number of GPRS modules: B450-M with B442 or B443	1

Number of IP modules: B426-M	2 (1 if 1 of the GPRS modules above is connected)
Number of RF receivers	1
Number of RADION RF repeaters	8
Number of RF sensors	64
Number of DSRF RF keyfobs	24
Number of RADION RF keyfobs	128

**Zones**

Zone 1	2 wire fire zone, single, or dual end-of-line (EOL 2,2KΩ) NC, NO
Zone 2 - 16 COM	15 single or dual end-of-line (EOL 2,2KΩ) NC, NO
Tamper	Enclosure tamper input (does not reduce point capacity)

**Option bus**

Dimensions in mm	4 wire, Ø 0.6 - 1.2
Maximum cable length in m	200 (panel to last keypad)
Maximum bus length in m	700 (maximum 14 devices, maximum 8 keypads)

**Environmental**

Minimum operating temperature in °C	-10
Maximum operating temperature in °C	55
Minimum relative humidity in %	10
Maximum relative humidity in %	95
Protection class	IP 30, IK 06

## Ordering information

### **AMAX4-P2ENE Intrusion kit, fr/de/nl/pt, Ethernet**

Kit including one AMAX panel 4000 and one B426-M Ethernet communication module, mobile  
Language Package 2: French, German, Dutch, Portuguese  
Order number **AMAX4-P2ENE**

### **AMAX4-P2ENG Intrusion kit, fr/de/nl/pt, GPRS**

Kit including one AMAX panel 4000, one B450-M Plug-in communicator interface, mobile, and one B442 Plug-in cellular module, GPRS  
Language Package 2: French, German, Dutch, Portuguese  
Order number **AMAX4-P2ENG**

### **AMAX4-P2ENH Intrusion kit, fr/de/nl/pt, HSPA+**

Kit including one AMAX panel 4000, one B450-M Plug-in communicator interface, mobile, and one B443 Plug-in Cellular, HSPA+ (3G+)  
Language Package 2: French, German, Dutch, Portuguese  
Order number **AMAX4-P2ENH**

### **AMAX4-P3ENE Intrusion kit, en/es/pl/sv, Ethernet**

Kit including one AMAX panel 4000 and one B426-M Ethernet communication module, mobile  
Language Package 3: English, Spanish, Polish, Swedish  
Order number **AMAX4-P3ENE**

### **AMAX4-P3ENG Intrusion kit, en/es/pl/sv, GPRS**

Kit including one AMAX panel 4000, one B450-M Plug-in communicator interface, mobile, and one B442 Plug-in cellular module, GPRS  
Language Package 3: English, Spanish, Polish, Swedish  
Order number **AMAX4-P3ENG**

### **AMAX4-P3ENH Intrusion kit, en/es/pl/sv, HSPA+**

Kit including one AMAX panel 4000, one B450-M Plug-in communicator interface, mobile, and one B443 Plug-in Cellular, HSPA+ (3G+)  
Language Package 3: English, Spanish, Polish, Swedish  
Order number **AMAX4-P3ENH**

### **AMAX4-P4ENE Intrusion kit, it/el, Ethernet**

Kit including one AMAX panel 4000 and one B426-M Ethernet communication module, mobile  
Language Package 4: Italian, Greek  
Order number **AMAX4-P4ENE**

### **AMAX4-P4ENG Intrusion kit, it/el, GPRS**

Kit including one AMAX panel 4000, one B450-M Plug-in communicator interface, mobile, and one B442 Plug-in cellular module, GPRS

Language Package 4: Italian, Greek  
Order number **AMAX4-P4ENG**

## Accessories

### **IUI-AMAX-LCD8 LCD keypad, 8-zone**

AMAX keypad 2000 D8, 8 zones LCD icon keypad  
Order number **IUI-AMAX-LCD8**

### **IUI-AMAX3-LED8 LED keypad, 8-zone**

AMAX keypad 3000 L8 is a 8 zone LED keypad  
Certification: EN 50131-3 Grade 2  
Order number **IUI-AMAX3-LED8**

### **IUI-AMAX3-LED16 LED keypad, 16-zone**

AMAX keypad 3000 L16 is a 16 zone LED keypad  
Certification: EN 50131-3 Grade 2  
Order number **IUI-AMAX3-LED16**

### **IUI-AMAX4-TEXT Text keypad**

AMAX keypad 4000 T, LCD text keypad, two lines with each 18 characters  
Order number **IUI-AMAX4-TEXT**

### **DX2010 Input expander, 8-zone**

Zone expansion module with 8 DEOL zone inputs  
Order number **DX2010**

### **DX3010 Output expander, 8-relay**

Package includes only the DX3010 board  
Order number **DX3010**

### **AE20EN Enclosure for module w/tamper skirt, EN**

AE20EN plastic enclosure for DX2010/DX3010  
Order number **AE20EN**

### **ICP-EZPK Programming key**

Blue key for transferring configurations to and from Easy Series and AMAX panels  
Order number **ICP-EZPK**

### **ICP-EZRU-0106 ROM UPDATE KEY - EZ V1**

Green key for upgrading the panel firmware  
Order number **ICP-EZRU-0106**

### **RFRC-OPT Wireless option bus interface**

A wireless receiver that connects RADION wireless peripherals such as the repeater, as well as detectors and transmitters, to supported Bosch control panels. For use in Europe.  
Order number **RFRC-OPT**

### **ICP-AMAX-LS Enclosure lock and key set**

Enclosure lock and key set  
Order number **ICP-AMAX-LS**

**Represented by:**

**Europe, Middle East, Africa:**  
Bosch Security Systems B.V.  
P.O. Box 80002  
5600 JB Eindhoven, The Netherlands  
Phone: + 31 40 2577 284  
[www.boschsecurity.com/xc/en/contact/](http://www.boschsecurity.com/xc/en/contact/)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**Germany:**  
Bosch Sicherheitssysteme GmbH  
Robert-Bosch-Ring 5  
85630 Grasbrunn  
Tel.: +49 (0)89 6290 0  
Fax: +49 (0)89 6290 1020  
[de.securitysystems@bosch.com](mailto:de.securitysystems@bosch.com)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**North America:**  
Bosch Security Systems, LLC  
130 Perinton Parkway  
Fairport, New York, 14450, USA  
Phone: +1 800 289 0096  
Fax: +1 585 223 9180  
[onlinehelp@us.bosch.com](mailto:onlinehelp@us.bosch.com)  
[www.boschsecurity.com](http://www.boschsecurity.com)

**Asia-Pacific:**  
Robert Bosch (SEA) Pte Ltd, Security Systems  
11 Bishan Street 21  
Singapore 573943  
Phone: +65 6571 2808  
Fax: +65 6571 2699  
[www.boschsecurity.com/xc/en/contact/](http://www.boschsecurity.com/xc/en/contact/)  
[www.boschsecurity.com](http://www.boschsecurity.com)