


# AMAX panel 2100

www.boschsecurity.com



**BOSCH**


Invented for life

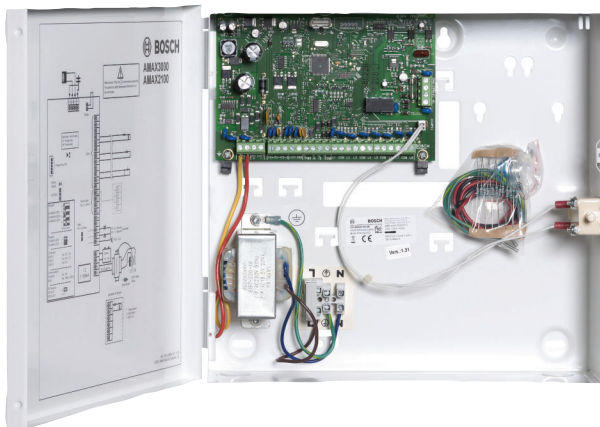

- ▶ 8 hardwired zones / 2 areas / 64 user codes
- ▶ On-board voice dialer
- ▶ Macro functionality
- ▶ USB direct connection

This panel is designed for residential and small to medium-sized businesses. It offers 8 zones and 2 areas and comes with an enclosure and a transformer. An on-board PSTN dialer transmits an alarm via the common telephone network to a phone and / or a communication center while at the same time a voice message is sent to the owner's landline or mobile phone to inform him about an intruder's presence. Commissioning the system is simple and involves minimum programming: the default settings already cover 90 % of the available functionality. Programming can either be done via the AMAX TEXT, LCD and LED keypads or via the programming software (A-Link Plus). The intrusion system can be used with hardwired detectors from Bosch.

## System overview

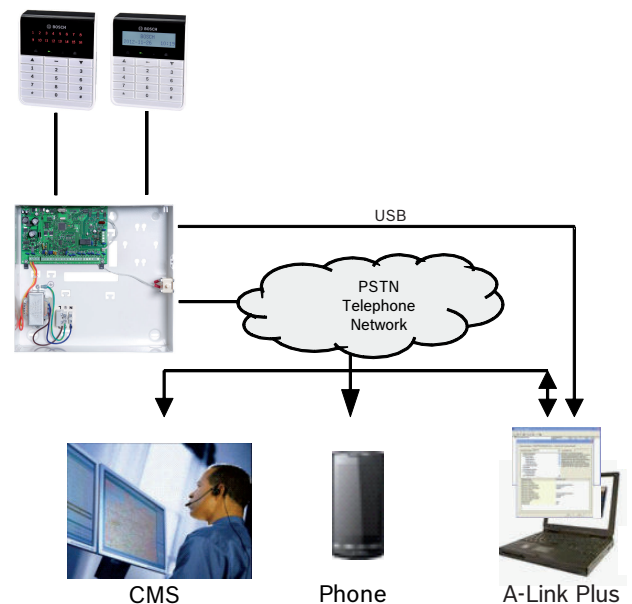

## Functions

### Basic functions

- Keypad code STAY / AWAY arming
- One button STAY / AWAY arming

- On-board dialer with CID / SIA transmission format. Voice dialer transmits up to 4 recorded messages to landline/mobile phones in case of an alarm. Messages can be recorded with A-Link Plus and sent to the control panel with the remote programming software A-Link Plus
- 16 weekly schedules with the option to add exceptions in the calendar
- 3 programmable macros: several single functions from the keypad are combined to one customer macro function, can be executed by pressing one button
- Remote maintenance operations (e.g. walk test, bypassing)
- Installer can enable the service mode for comfortable programming without having alarms or outputs triggered
- In multi-area set-up (direct and multiple arming), "area status" is displayed
- Area name is displayed on the master or area text keypad
- 4 on-board outputs (two monitored)
- Up to three output event types can be configured for one physical output
- Every zone except zone 1 can be used with four-wire fire detectors
- Any zone can be used for chime mode (door bell)
- Any zone can be used to detect a sensor tamper (DEOL)
- Zones can be bypassed by name
- Test mode for outputs and zones

#### Optional functions

- Relay outputs on Extension module (with DX3010)
- Connect outdoor sirens and IP cameras to an optional 8 relay module (DX3010)
- Programming key
- Arming, bypassing, isolating, operating outputs and inquiry with the RSC+ app on mobile devices (with the B426-M or the B450-M with B442 or B443 modules)

#### Optional alarm transmission

- IP communication with Bosch Conettix IP, SIA DC09 UDP and SIA DC 09 TCP protocols via B426-M and B450-M with B442 or B443 modules
- GPRS communication with Bosch Conettix IP, SIA DC09 UDP and SIA DC 09 TCP protocols via B450-M with B442 or B443 modules

#### Optional remote programming via A-Link Plus

- IP communication (B426-M and B450-M with B442 or B443 modules)
- GPRS communication (B450-M with B442 or B443 modules)

#### Communication with Bosch Software Packages

The AMAX system can communicate with the following software packages:

#### Remote programming software A-Link Plus

The AMAX system can be accessed and programmed via the remote programming software A-Link Plus. All control panel and status information are accessible

and an operation of the AMAX panel from a remote location is possible.

A-Link Plus can connect to the AMAX panel via USB, IP or modem.

#### Compatibility information

Basic	
PSTN communicator (integrated)	Formats: Contact ID, SIA DC 03
Magnetic contacts	All magnetic contacts, including recessed, terminal connection, miniature over-head door, and surface mount.
Intrusion detectors	All conventional intrusion detectors, including Blue Line, seismic, PIR, TriTech, photoelectric and TriTech PIR Microwave.
Four-wire smoke detectors	Conventional 12V smoke, heat and photoelectric smoke detectors.
Optional	
Relays	DX3010 output module
IP communicator	B426-M and B450-M with B442 or B443 modules
GPRS/GSM communicator	B450-M with B442 or B443 modules

Assorted literature is available. Refer to the appropriate datasheet, brochure, and installation manuals for additional data.

Availability varies according to sales region.

#### Certifications and approvals

Region	Regulatory compliance/quality marks	
Germany	VdS	H116003 [AMAX 2100/3000, RFRC-OPT, RFUN, RFDW-RM, RFDW-SM, RFPR-12, RFDL-11, RFKF-TB, RFKB-FB]
Europe	CE	AMAX panel 2100, AMAX panel 3000
	EN50131	EN-ST-000166 ICP-AMAX2-P2-EN, ICP-AMAX2-P3-EN, ICP-AMAX2-P4-EN, ICP-AMAX3-P2-EN, ICP-AMAX3-P3-EN, ICP-AMAX3-P4-EN
Sweden	SBSC	14-523 [ICP-AMAX2-P3-EN]

#### Technical specifications

Electrical	
Power supply type	EN = A
Transformer	
Transformer input in VAC	230

Transformer output in VAC	18
Transformer AC power in VA	20
Transformer fuse in mA	500
<b>AC input</b>	
Minimum operating voltage in VDC	195
Maximum operating voltage in VDC	253
Line voltage frequency in Hz	50
<b>DC output</b>	
DC output maximum current for all components in mA	1100
DC output maximum current for all components: dependency on battery	<ul style="list-style-type: none"> <li>Battery 7Ah standby 12h (recharge Batt 80% in 72h) = 550mA</li> <li>Battery 7Ah standby 36h + 15min alarm current 500mA (recharge Batt 80% in 72h) = 150mA</li> </ul>
<b>Aux 1 / 2 output</b>	
Aux 1 / 2 output voltage	+12V / GND
Aux 1 / 2 nominal output voltage under AC line input in VDC	13.8 (+3% / -5%)
Aux 1 / 2 output max. Vpp in mV	675
Aux 1 / 2 output voltage range under AC line input in VDC	12.82 - 13.9
Aux 1 / 2 output current in mA at 25°C	500
<b>Outputs</b>	
PO -1 / PO -2 maximum supervised output current in mA	500
PO -3 maximum current in mA	100
<b>Option bus</b>	
Option bus nominal output voltage under AC line input in VDC	13.8 (+3% / -5%)
Option bus output voltage range under AC line input in VDC	13.11 - 14.2
Option bus 1 maximum current in mA at 25°C	500
Panel PCB maximum quiescent current in mA	100
<b>Battery</b>	
Battery type	12 V / 7 Ah Bosch D 126

Low battery condition in VDC	below 11.0
Minimum battery condition in VDC	10.8
<b>Frequency bands of operation</b>	
GSM900	Class 4 (2W) - GPRS Class 33
GSM1800	Class 1 (1W) - GPRS Class 33
UMTS2100	Class 3 (0.25W)
<b>Mechanical</b>	
Dimension in cm (H x W x D)	26.0 x 28.0 x 8.35
Weight in g	1950
<b>Panel features</b>	
Number of zones	8
Number of on-board zones	8
Number of users	64
Number of events	256 history events, stamped with time, and date 256 EN history events, stamped with time, and date 256 dialer history events, stamped with time, and date
Pin code variations	1000000
<b>Number of devices</b>	
Number of keypads	4
Number of DX 3010 modules	1
Number of GPRS modules: B450-M with B442 or B443	1
Number of IP modules: B426-M	2 (1 if 1 of the GPRS modules above is connected)
<b>Zones</b>	
Zone 1	Single or dual end-of-line (EOL 2,2KΩ) NC, NO
Zone 2 – 16 COM	7 Single or dual end-of-line (EOL 2,2KΩ) NC, NO
Tamper	Enclosure tamper input (does not reduce point capacity)
<b>Option bus</b>	
Dimensions in mm	4 wire, Ø 0.6 – 1.2

Maximum cable length in m	200 (panel to last keypad)
Maximum bus length in m	700 (maximum 14 devices, maximum 8 keypads)

### Environmental

Minimum operating temperature in °C	-10
Maximum operating temperature in °C	55
Minimum relative humidity in %	10
Maximum relative humidity in %	95
Protection class	IP 30, IK 06

### Ordering information

#### ICP-AMAX2-P1 Intrusion panel, en/pl/tr/hu

Language package 1: English, Polish, Turkish, Hungarian

Not certified according to European standards

Order number **ICP-AMAX2-P1**

#### EWE-AMAX-IW 12mths wrty ext AMAX

12 months warranty extension

Order number **EWE-AMAX-IW**

#### ICP-AMAX2-P2-EN Intrusion panel, fr/de/nl/pt

Language Package 2: French, German, Dutch, Portuguese

Order number **ICP-AMAX2-P2-EN**

#### EWE-AMAX-IW 12mths wrty ext AMAX

12 months warranty extension

Order number **EWE-AMAX-IW**

#### ICP-AMAX2-P3-EN Intrusion panel, en/es/pl/sv

Language Package 3: English, Spanish, Polish, Swedish

Order number **ICP-AMAX2-P3-EN**

#### EWE-AMAX-IW 12mths wrty ext AMAX

12 months warranty extension

Order number **EWE-AMAX-IW**

#### ICP-AMAX2-P4-EN Intrusion panel, IT/EL

Language Package 4: Italian, Greek

Order number **ICP-AMAX2-P4-EN**

#### EWE-AMAX-IW 12mths wrty ext AMAX

12 months warranty extension

Order number **EWE-AMAX-IW**

### Accessories

#### IUI-AMAX-LCD8 LCD keypad, 8-zone

AMAX keypad 2000 D8, 8 zones LCD icon keypad

Order number **IUI-AMAX-LCD8**

#### IUI-AMAX3-LED8 LED keypad, 8-zone

AMAX keypad 3000 L8 is a 8 zone LED keypad

Certification: EN 50131-3 Grade 2

Order number **IUI-AMAX3-LED8**

#### IUI-AMAX3-LED16 LED keypad, 16-zone

AMAX keypad 3000 L16 is a 16 zone LED keypad

Certification: EN 50131-3 Grade 2

Order number **IUI-AMAX3-LED16**

#### IUI-AMAX4-TEXT Text keypad

AMAX keypad 4000 T, LCD text keypad, two lines with each 18 characters

Order number **IUI-AMAX4-TEXT**

#### ICP-AMAX2-PCBP4 PCB board, en/fr/es/pt

Mainboard for AMAX panel 2100

Language package 4: English, French, Spanish, Portuguese

Order number **ICP-AMAX2-PCBP4**

#### DX3010 Output expander, 8-relay

Package includes only the DX3010 board

Order number **DX3010**

#### AE20EN Enclosure for module w/tamper skirt, EN

AE20EN plastic enclosure for DX2010/DX3010

Order number **AE20EN**

#### B426-M Ethernet communication module, mobile

Supports Ethernet communication for remote programming and mobile apps on AMAX and Solution Series control panels

Order number **B426-M**

#### B450-M Plug-in communicator interface, mobile

Supports cellular communication for remote programming and mobile apps on AMAX and Solution Series control panels

Order number **B450-M**

#### B442 Plug-in cellular module, GPRS

Multi-function cellular communicator that provides IP communication over a (GPRS) cellular network

Order number **B442**

#### B443 Plug-in Cellular, HSPA+ (3G+)

Multi-function 3G/4G cellular communicator providing IP communication over a GPRS/EDGE/UMTS/HSPA+ cellular network

Order number **B443**

#### ICP-EZPK Programming key

Blue key for transferring configurations to and from Easy Series and AMAX panels

Order number **ICP-EZPK**

#### ICP-EZRU-0106 ROM UPDATE KEY - EZ V1

Green key for upgrading the panel firmware

Order number **ICP-EZRU-0106**

#### ICP-EZTS@01 Dual tamper switch

Dual tamper switch

Order number **ICP-EZTS@01**

#### ICP-AMAX-LS Enclosure lock and key set

Enclosure lock and key set

Order number **ICP-AMAX-LS**

**ITS-BAPMOD-USB USB modem**

USB modem

Order number **ITS-BAPMOD-USB**

---

**ICP-AMAX-ENC-EN Enclosure with transformer, small**

Enclosure with transformer, small

Order number **ICP-AMAX-ENC-EN**

---

**ICP-AMAX2-PCBP1 PCB board, en/pl/tr**

PCB board, en/pl/tr

Order number **ICP-AMAX2-PCBP1**

---

**ICP-AMAX2-PCBP2 PCB board, fr/de/nl/pt**

PCB board, fr/de/nl/pt

Order number **ICP-AMAX2-PCBP2**

---

**ICP-AMAX2-PCBP3 PCB board, en/es/pl/sv**

PCB board, en/es/pl/sv

Order number **ICP-AMAX2-PCBP3**

---

**Represented by:**

**Europe, Middle East, Africa:**

Bosch Security Systems B.V.  
P.O. Box 80002  
5600 JB Eindhoven, The Netherlands  
Phone: + 31 40 2577 284  
emea.securitysystems@bosch.com  
emea.boschsecurity.com

**Germany:**

Bosch Sicherheitssysteme GmbH  
Robert-Bosch-Ring 5  
85630 Grasbrunn  
Germany  
www.boschsecurity.com

**North America:**

Bosch Security Systems, LLC  
130 Perinton Parkway  
Fairport, New York, 14450, USA  
Phone: +1 800 289 0096  
Fax: +1 585 223 9180  
onlinehelp@us.bosch.com  
www.boschsecurity.us

**Asia-Pacific:**

Robert Bosch (SEA) Pte Ltd, Security Systems  
11 Bishan Street 21  
Singapore 573943  
Phone: +65 6571 2808  
Fax: +65 6571 2699  
apr.securitysystems@bosch.com  
www.boschsecurity.asia