

# GV3 Series v8.03 to v8.05

Control Panels



**BOSCH**





# Table of Contents

<b>1</b>	<b>GV3 Control Panel Connections (D9412GV3 Shown)</b>	<b>5</b>
<b>2</b>	<b>Upgrade GV3 Hardware and Programming</b>	<b>7</b>
2.1	Receive Existing Control Panel Programming	7
2.1.1	Update the D5200 Programmer	7
2.1.2	Receive Existing Control Panel Programming with a D5200 Programmer	7
2.1.3	Receive Existing Control Panel Programming with RPS	7
2.2	Upgrade Hardware to a GV3 Series Control Panel	8
2.2.1	Prepare to Remove Existing Hardware	8
2.2.2	Remove the Existing Control Panel	8
2.2.3	Install the GV3 Control Panel In the Enclosure	8
2.2.4	Replace the Terminal Strips	9
2.3	Upgrade Programming to a GV3 Control Panel Programming	9
2.3.1	Upgrade a GV2 Series, G Series, or Non-G Series Control Panel to a GV3 Using a D5200 Series Programmer9	
2.3.2	Upgrade a Control Panel to a GV3 Using Remote Programming Software (RPS) 5.12 or Higher	9
<b>3</b>	<b>Programming the Control Panel</b>	<b>11</b>
3.1	RPS Programming over a Network Using the DX4020 Ethernet Network Interface Module	11
3.2	RPS Programming over a Network Using the ITS-DX4020-G GPRS/GSM Communicator	11
3.3	RPS Programming Using the DX4010V2 RS-232/USB Serial Interface Module	11
<b>4</b>	<b>Programming to Set Up Central Station Reporting</b>	<b>12</b>
4.1	Basic Telephone	12
4.2	Basic Internet Protocol (IP)	12
4.3	Account Number	12
<b>5</b>	<b>Programming the Control Panel for Common Reporting Options</b>	<b>13</b>
5.1	Set Up Daily Test Report Using a D5200 or RPS	13
5.2	Set Up Open and Close Reports Using a D5200 or RPS	13
5.2.1	Area Wide Parameters	13
5.2.2	Set Authority Level	13
<b>6</b>	<b>Setting Up Points and Outputs</b>	<b>14</b>
6.1	Using the Relay Option Within Point Assignments	14
6.2	Point Index (Default Values)	14
<b>7</b>	<b>Add System Users Locally With a Keypad</b>	<b>17</b>
7.1	Add Users (CMD 56) Using a Keypad	17
7.2	Add Card (CMD 56) for Access Control Only Using a Keypad	17
<b>8</b>	<b>Turning the System ON or OFF and Keypad Commands</b>	<b>18</b>
8.1	Arming and Disarming the System	18
8.1.1	Master Arming	18

8.1.2	Disarming	18
8.1.3	Set Duress +1 Using a D5200 or RPS	18
8.2	Basic and Advanced Commands	18
8.3	SIA CP-01 False Alarm Prevention Options	19
<b>9</b>	<b>Setting DIP Switches</b>	<b>20</b>
9.1	D9127 U/T POPIT Dip Switch Key	20
9.2	D9210B Switch Settings	20
9.3	D720, D1255, D1260 Dip Switch Settings	20
9.4	D9131A Dip Switch Settings	20
9.5	D8129 OctoRelay Dip Switch Settings	20
9.6	D8128C OctoPOPIT Dip Switch Settings	20
9.7	D8128D OctoPOPIT Dip Switch Settings	20
<b>10</b>	<b>Reporting Format Definitions</b>	<b>21</b>
<b>11</b>	<b>Frequently Asked Questions</b>	<b>25</b>

# 1 GV3 Control Panel Connections (D9412GV3 Shown)

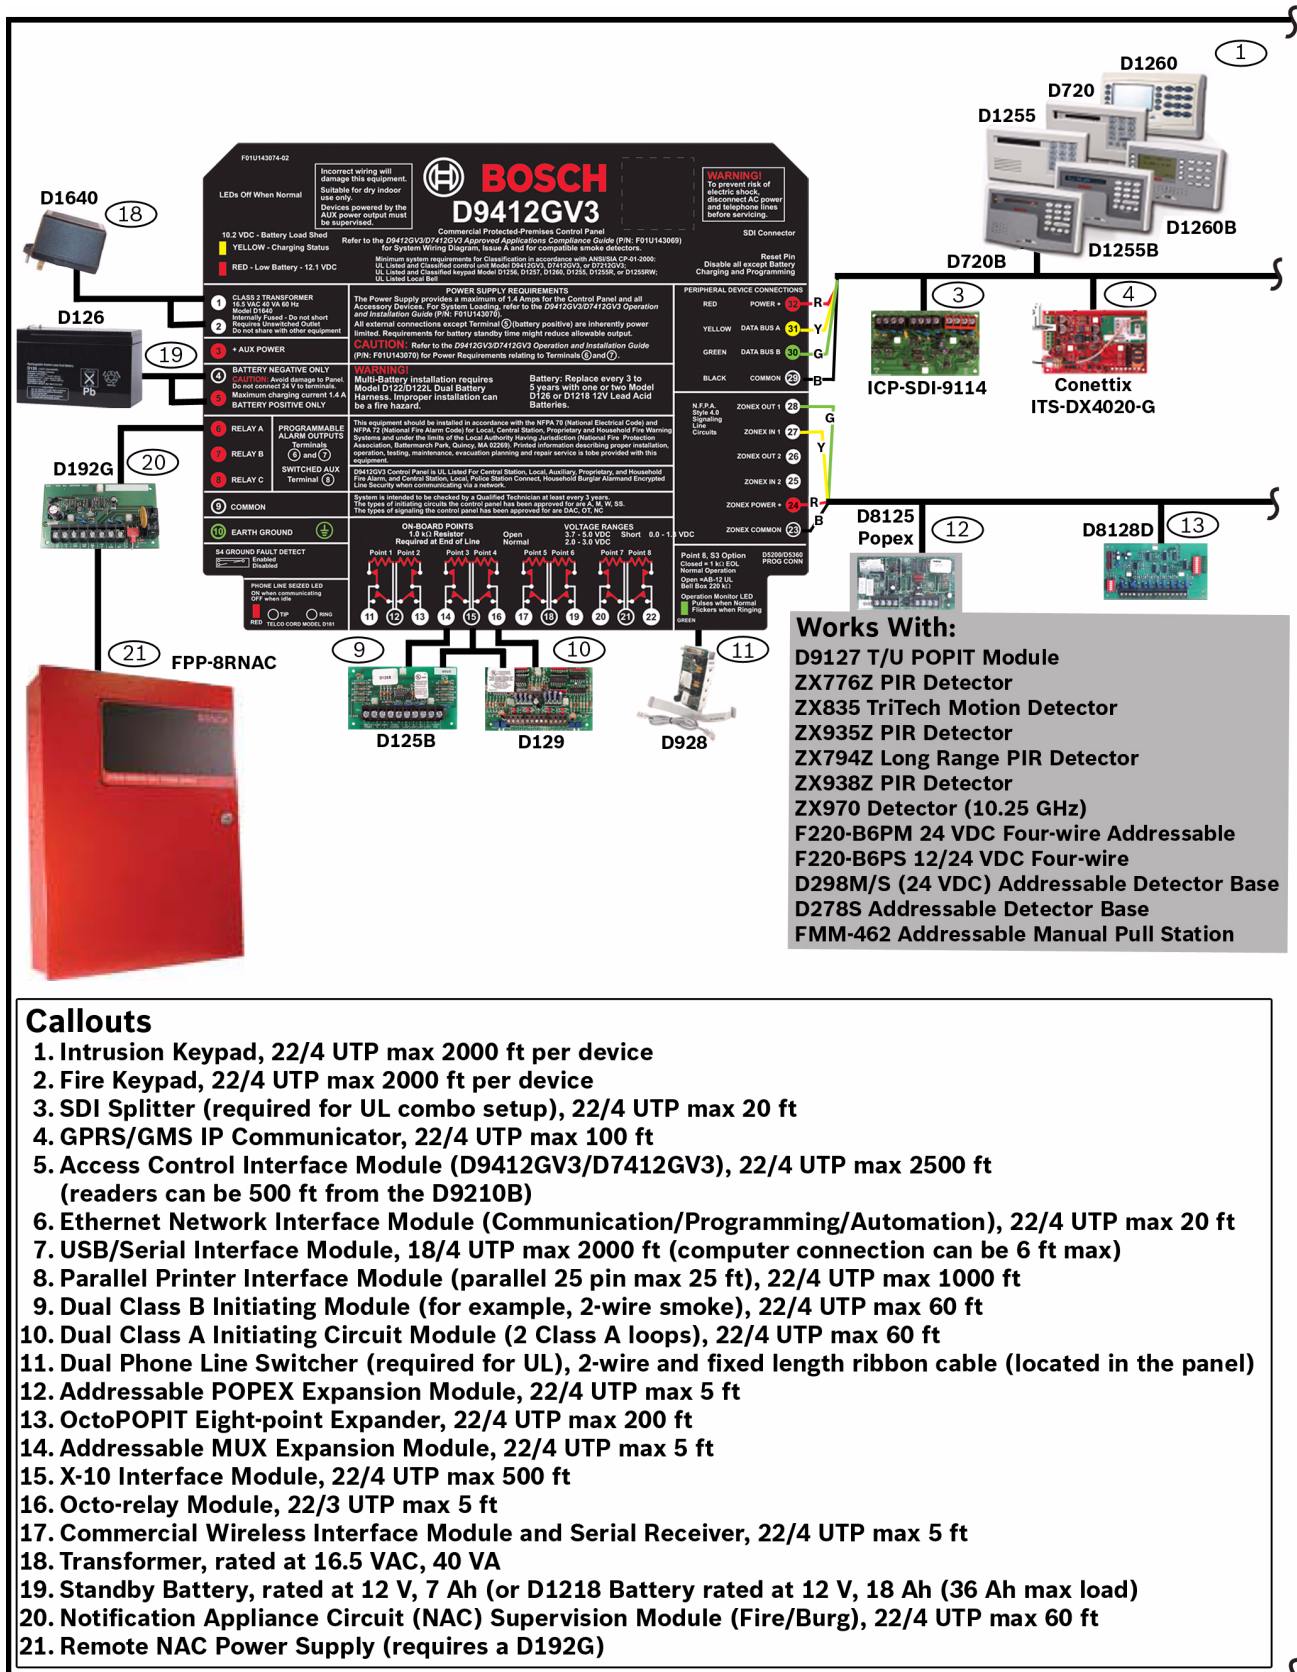

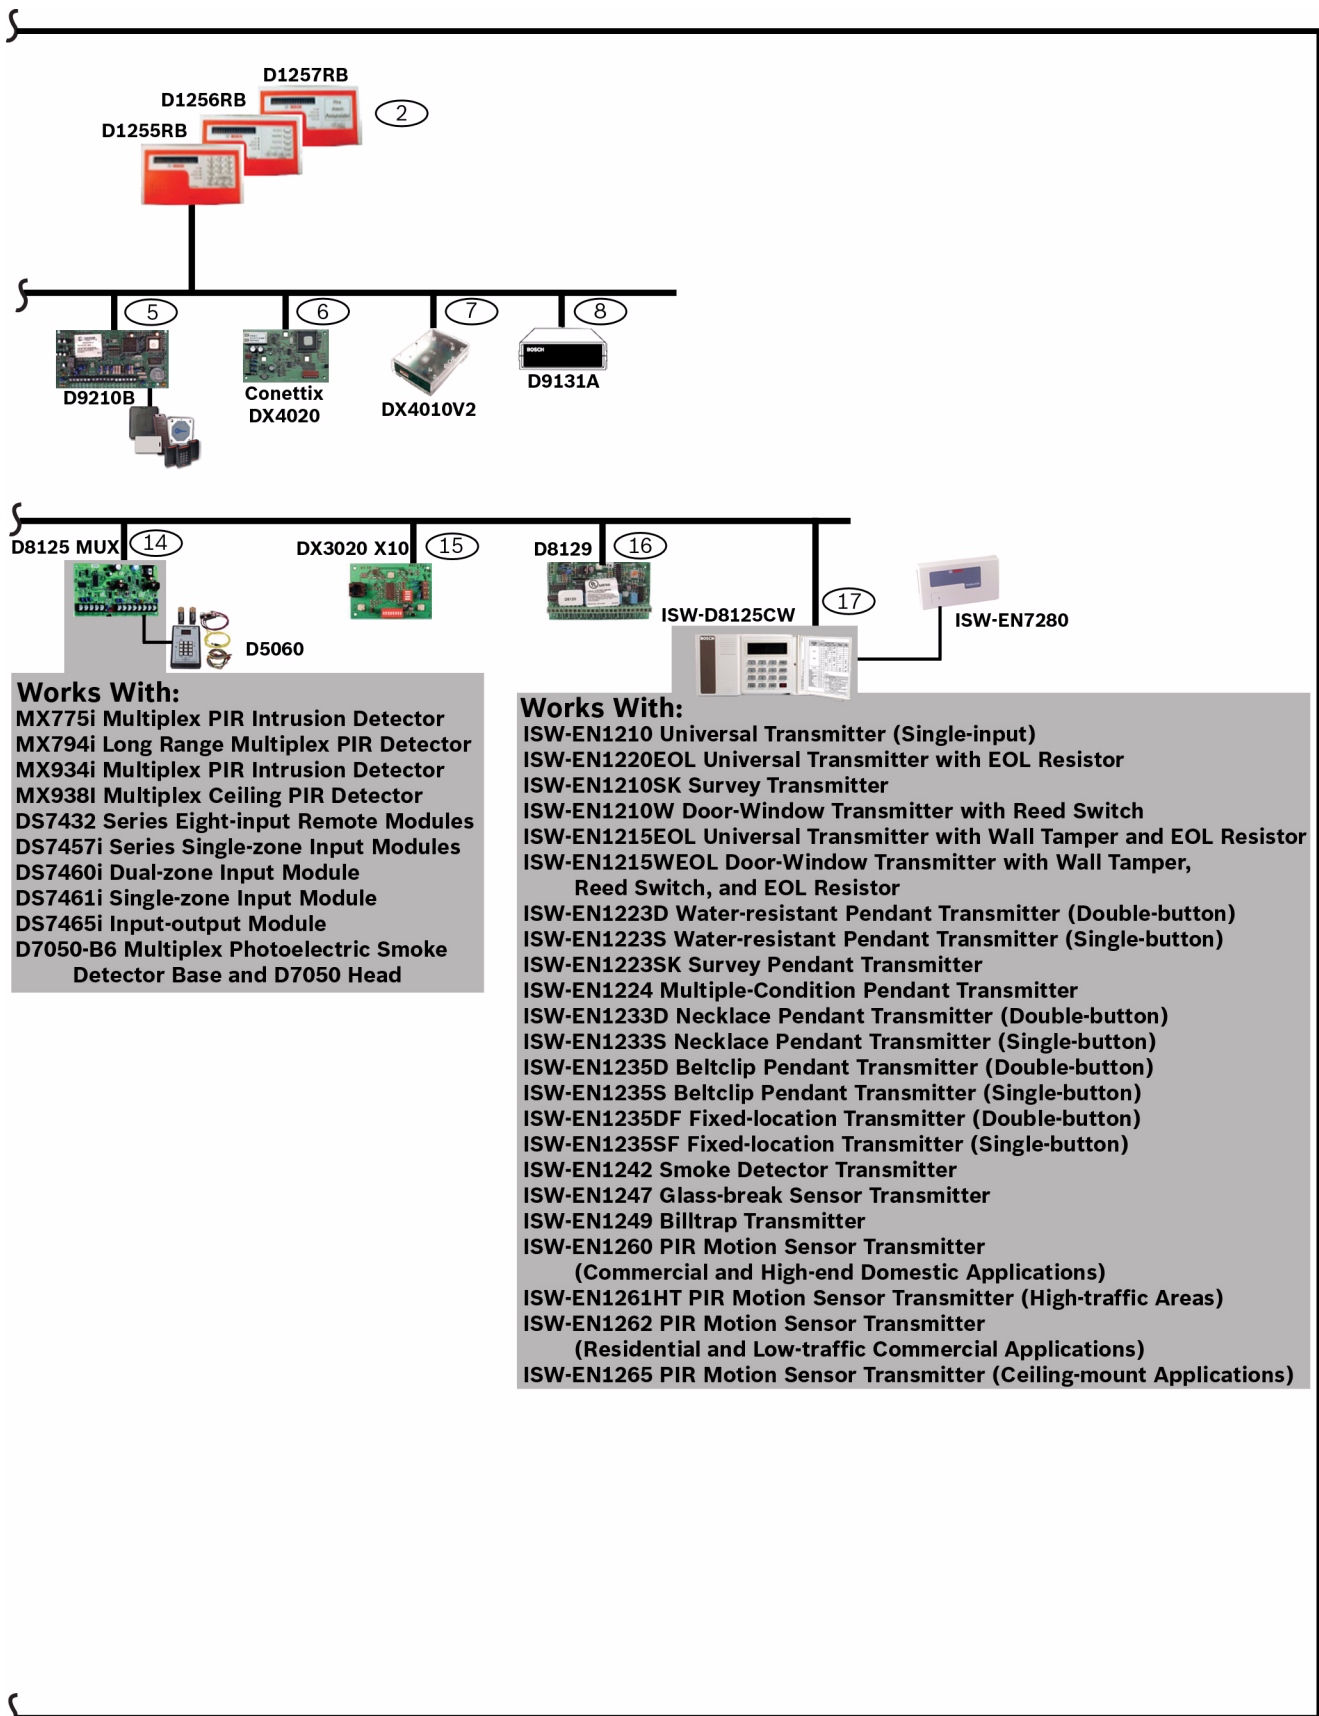

## 2 Upgrade GV3 Hardware and Programming

### 2.1 Receive Existing Control Panel Programming

#### 2.1.1 Update the D5200 Programmer

If you use the D5200 programmer to program the control panel, you must have the current GV2 handlers for all upgrades to GV3. If you have not previously updated your D5200 programmer handlers, download all current GV2 handlers to the D5200 from the handler server.

The versions for the handlers on your programmer must be:

- GV2MAIN v1.04 or later
- RADXUSR1 v1.06 or later
- RADXUSR2 v1.05 or later
- RADXPNTS v1.08 or later
- RADXSKED v1.04 or later
- RADXAXS v1.06 or later
- GV2AUX v1.04 or later

To download the handlers:

1. Connect an RJ-11 telephone cord between the TELCO port on the D5200 programmer and an outside telephone jack that accepts pulse dialing.
2. Turn on the D5200 programmer and enter the password.
3. Use the down arrow key to scroll to **UPDATE** and then press the [ENTER GROUP] key.
4. Type the name of the handler you wish to update (for example, GV2MAIN), in the **HandName** field.
5. Press [ENTER] to scroll to **Phone**.
6. Enter the telephone number for downloading handlers, 18006574584.



#### NOTICE!

If the phone line requires you to first dial 9 to reach an outside line, include the 9 in the phone number you typed in *Step 6* (i.e., type 918006574584).

7. Press [ENTER] to scroll to **Mode**.
8. Press the space bar until you see **TELCO->A** (or **TELCO->B** if the B card is present in the D5200 programmer).
9. Press [ENTER] to begin the handler download.

#### 2.1.2 Receive Existing Control Panel Programming with a D5200 Programmer



#### NOTICE!

GV3 control panels require updated GV2MAIN and GV2AUX handlers. Refer to *Section 2.1.1 Update the D5200 Programmer, page 7* for instructions to download the latest handlers to your programmer.

1. Check the programmer memory for available space (> 40 kb free space is recommended).
2. Receive a copy of the a handler from the old control panel and save it to your D5200 Programmer.
3. If the control panel is a G or Non-G Series control panel, you must manually record the 9000MAIN and the RADXAUX1 programming. You must then add the information using the new GV2MAIN and GV2AUX handlers into the D5200 Programmer before you can send the program to the GV3 panel.


#### 2.1.3 Receive Existing Control Panel Programming with RPS

1. In RPS, double-click on the control panel name.
2. Click **Connect**. Once connected, the **Panel Sync** window opens.
3. Select the **Recieve Panel Data** option button and click **OK**.

## 2.2 Upgrade Hardware to a GV3 Series Control Panel

### 2.2.1 Prepare to Remove Existing Hardware


1. Power down the existing control panel by disconnecting the battery and the AC power.
2. Remove the four removable terminal strips by tilting the strip up and outward.  
Do not remove the wiring from the terminal strip.

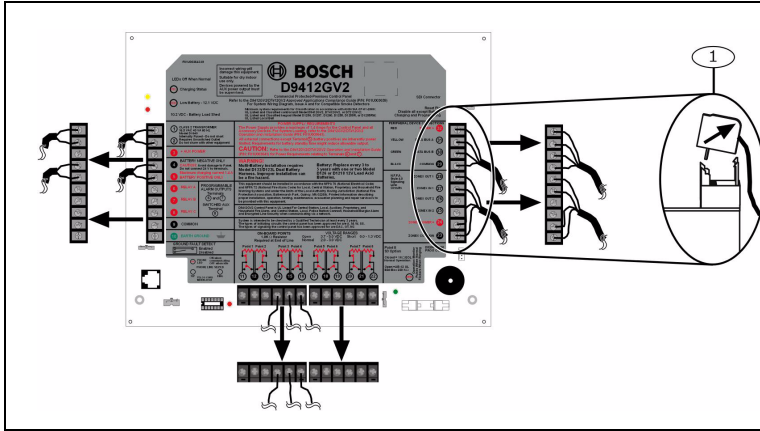

1 - Removable terminal strips

### 2.2.2 Remove the Existing Control Panel


1. Remove the lock down tab screw.
2. Lift up on the control panel to free it from the enclosure mounting hooks, and remove the control panel from the enclosure it.

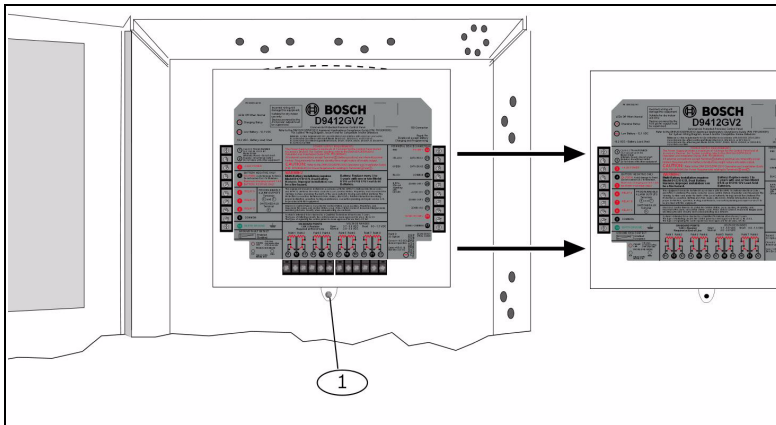

1 - Lock down tab

### 2.2.3 Install the GV3 Control Panel In the Enclosure

1. Place the GV3 Control Panel in the enclosure using the mounting skirt hook holes on the back of the control panel and the mounting skirt hooks on the enclosure.
2. Replace the lock down tab screw.

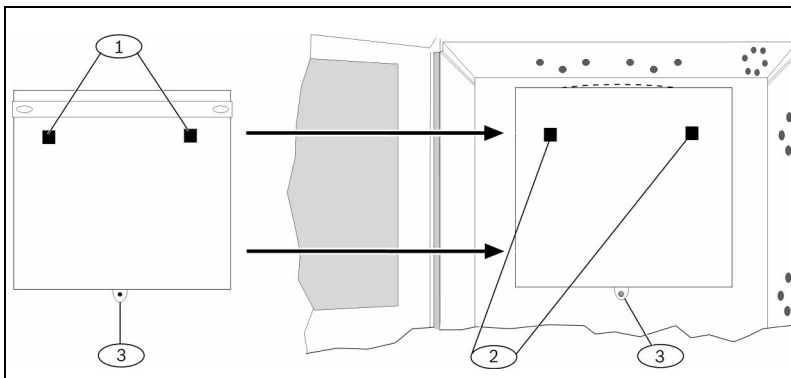

1 - Mounting skirt hook holes  
2 - Mounting skirt hooks  
3 - Lock down tab




**NOTICE!**

If the control panel was previously mounted using the screw hole configuration, the you must re-mount the new control panel. The GV3 control panel mounting screw hole locations do not align with the locations for older control panels.

**2.2.4****Replace the Terminal Strips**

1. Replace the four removable terminal strips by pushing them straight down until they snap into position.

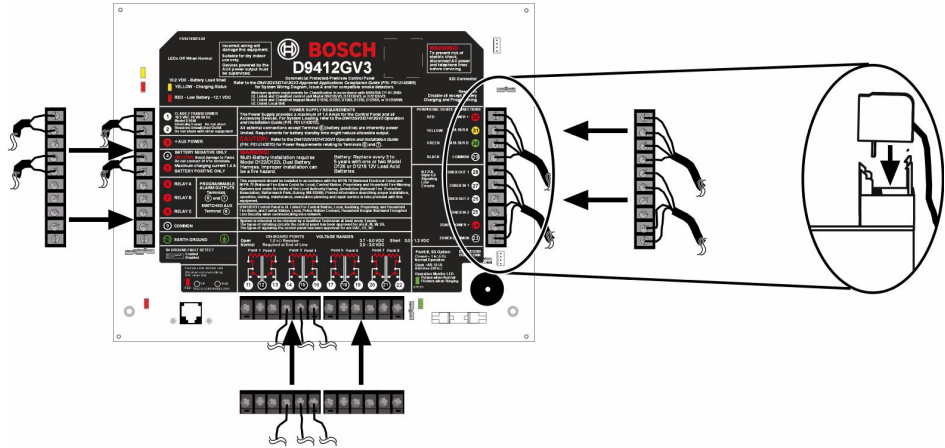

2. Connect the battery and AC power.

**2.3****Upgrade Programming to a GV3 Control Panel Programming****NOTICE!**

You must upgrade G Series and Non-G Series control panels to GV2 programming prior to upgrading to GV3 programming.

**2.3.1****Upgrade a GV2 Series, G Series, or Non-G Series Control Panel to a GV3 Using a D5200 Series Programmer**

1. Send a copy of each saved handler from the D5200 to the new control panel.
2. Test the control panel for operation.
3. Delete the saved control panel information from the D5200.

**2.3.2****Upgrade a Control Panel to a GV3 Using Remote Programming Software (RPS) 5.12 or Higher**

1. In RPS, highlight the control panel name by selecting it.
2. Click the **View** button on the **Remote Programmer Toolbar**.
3. In the resulting **Panel Data - View** window, click the **Edit** button.
4. In the resulting **Panel Data - Edit** window, select the new control panel type from the **Panel Type** drop-down. (If the control panel is a G or Non-G Series control panel, you must upgrade to GV2 first, and then repeat each of these steps to choose the GV3 control panel.) Click **OK** to close the window.
5. Click **Save** in the **Panel View** window to save the changes and close the **Panel View** window.
6. Click **Connect**. Once connected, the **Panel Sync** window opens.
7. Select the **Send ALL RPS Data to Panel** option button and click **OK**.
8. Once the sync completes, click **Disconnect** to disconnect from the control panel.
9. Exit RPS.

10. Test the control panel for operation.

## 3 Programming the Control Panel

You can program the control panel with RPS using either a network connection or serial connection.

### 3.1 RPS Programming over a Network Using the DX4020 Ethernet Network Interface Module

For additional information, refer to *IP Address Programming* in the *Conettix DX4020 Network Interface Module Installation Guide* (P/N: F01U045288).

### 3.2 RPS Programming over a Network Using the ITS-DX4020-G GPRS/GSM Communicator

For additional information, refer to the *Conettix ITS-DX4020-G Installation Guide* (P/N: F01U163066).

### 3.3 RPS Programming Using the DX4010V2 RS-232/USB Serial Interface Module

For additional information, refer to the *DX4020 RS-232/USB Serial Interface Module Installation Instructions* (P/N: F01U083036).

## 4 Programming to Set Up Central Station Reporting

### 4.1 Basic Telephone

1. Go to **PANEL WIDE PARAMETERS (GV2MAIN)→Phone (Phone and Phone Parameters in RPS)**.
2. Enter the primary telephone number in the **Phone 1** field.
3. If a secondary telephone number is required, enter it in the **Phone 2** field.
4. Go to **Panel Wide Parameters→Routing→Route Group 1**.
5. Enter **1** in the **Primary** field.
6. If a secondary telephone is required, enter **2** in the **Secondary (Backup in RPS)** field.

### 4.2 Basic Internet Protocol (IP)

1. Go to **PANEL WIDE PARAMETERS (GV2MAIN)→Routing→Route Group 1 Primary**.
2. Enter **1**.
3. Go to **Enhanced Routing→Route Group 1 Primary SDI (88 or 92)**.
4. Select **YES**.
5. Go to **GV2AUX→Enhanced Communications**.
6. Select or enter the following values:



#### NOTICE!

Enhanced Communications settings usually follow the recommendations of Central Stations staff.

If using an ITS-DX4020-G for communication, refer to the *ITS-DX4020-G Installation and Operation Guide* (P/N: F01U163066).

Parameter	Value
Enable Enhanced Communication	YES
Path 1 IP Address	IP address of Central Station receiver
Path 1 Port Number	Port Number of Central Station receiver
Path 1 Poll Rate (seconds) <sup>1</sup>	Poll rate recommended by Central Station
Path 1 ACK Wait Time	13 sec (default setting)
Path 1 Retry Count	5 (default Setting)

<sup>1</sup> If the control panel is programmed to send a heartbeat poll to the central station, a rate of 75 sec maintains the virtual link in most network configurations.

### 4.3 Account Number

In RPS, go to **AREA WIDE PARAMETERS (GV2MAIN)** and enter the account number (up to 10 digits) in the **Account Number** parameter.

For a D5200 Programmer, receive a copy of GV2MAIN and then go to **AREA WIDE PARAMETERS→Area Parameters**. Enter the 4 digit account number in Acct#Digit 7&8 and Acct# Digit 9&10, press **Send-Load** to send changes to panel.



#### NOTICE!

Area 1 is the only area turned on by default.

## 5 Programming the Control Panel for Common Reporting Options

### 5.1 Set Up Daily Test Report Using a D5200 or RPS

1. Go to **RADXSKE**D→**Schedules**→**Skeds**.
2. Enter Function Code 9 (Test Report) in an unused Sked.
3. Select **NO** for the Deferred parameter to send test reports regardless of other test reports sending between scheduled test reports.
4. Select **NO** for the Hourly parameter to send test reports only when the sked executes and not every hour.
5. Enter the time at which you wish the schedule to send the report.
6. Leave the Date parameter disabled so that the sked executes by days of the week instead of only on a selected date.
7. Select **YES** for each day of the week.
8. Select **NO** for:
  - Except On Holiday
  - Holidays 1 - 4

### 5.2 Set Up Open and Close Reports Using a D5200 or RPS

#### 5.2.1 Area Wide Parameters

To report each area independently:

- Go to **AREA WIDE PARAMETERS (GV2MAIN)**→**Open/Close Options**→**Acct O/C** on the D5200. Go to **AREA WIDE PARAMETERS (GV2MAIN)**→**Area/Bell,Open/Close Options**→**Acct Open/Close** in RPS. Select **NO** (default).
- Go to **Area O/C** on the D5200. Go to **Area Open/Close** in RPS). Select **YES** (default).

To report by account (Close signal is sent when the last area in an account is armed; Open signal is sent when the first area is disarmed):

- Go to **AREA WIDE PARAMETERS (GV2MAIN)**→**Open/Close Options**→**Acct O/C** on the D5200. Go to **AREA WIDE PARAMETERS (GV2MAIN)**→**Area/Bell,Open/Close Options**→**Acct Open/Close** in RPS. Select **YES**.
- Go to **Area O/C** on the D5200. Go to **Area Open/Close** in RPS. Select **NO**.



#### NOTICE!

If you want Perimeter Open and Close, select **Perimeter O/C = YES**.

#### 5.2.2 Set Authority Level

1. Go to **USER INTERFACE (GV2MAIN)**→**Authority Levels**.
2. Go to the Authority Level to be used by users sending Open and Close reports.
3. Select **E** (enabled) for **Area O/C** (**Area Open/Close** in RPS).
4. Select **E** for **Restricted O/C** (**Restricted Open/Close** in RPS).
5. Select **E** for **Perimeter O/C** (**Perimeter Open/Close** in RPS).

## 6 Setting Up Points and Outputs

### 6.1 Using the Relay Option Within Point Assignments

Relay Programming allows any one point or several points to latch a single relay through software when the selected point generates an alarm. Relays are number 1 through 8 and are programmed by entering the number of the relay (1 - 8) in the Relay column in Point Assignments. This relay latches on a generated alarm and resets after acknowledging and then clearing the alarm from memory.

Relay	D8129 Actual Relay Number	
	D7412GV3/D7212GV3 <sup>1</sup>	D9412GV3 <sup>2</sup>
1	9	73
2	10	74
3	11	75
4	12	76
5	13	77
6	14	78
7	15	79
8	16	80

<sup>1</sup> For the D7412GV3 and D7212GV3, connect to Terminal 28 for data (Zonex 1 Out).

<sup>2</sup> For the D9412GV3, connect to Terminal 26 for data (Zonex 2 Out).

**Table 6.1** Actual Relays Latched by Control Panel Type

Switch Number	Setting
1	ON
2	OFF
3	ON
4	ON

**Table 6.2** D8129 Switch Settings for All Control Panel Types

#### NOTICE!

Programmers must be aware of the following considerations:

- Do not use relays designated within **Point Assignments** for multiple functions. For example, Relays 73 through 80 on the D9412GV3 should not be used for relay-follow-point or area-wide or panel-wide relays.
- Relays should not be selected to follow points programmed as Invisible Points.



### 6.2 Point Index (Default Values)

Pt Index Number	Description	Pt Index Number	Description
1	24-Hour Instant Audible Alarm on Open or Short	17	D279 (Non-Priority)
2	Invisible/Silent Hold Up on Short	18	D279 (Priority)
3	Fire Pull Station Alarm on Short	19	Easikey Input
4	Smoke Detector with Reset Alarm on Short	20	POPIT Motion Sensor Interior
5	Smoke Detector with Verification Reset and Alarm on Short	21	POPIT Motion Sensor Perimeter
6	Bell Supervision Trouble on Open/Short	22	Fire Supervisory on Open, Trouble on Short
7	Perimeter Instant Alarm on Open or Short, Watch Point when Disarmed	23	Non-Fire Supervisory on Open, Trouble on Short
8	Perimeter Delay on Short, Instant Alarm on Short, Watch Point when Disarmed	24	Local, No Visual or Audible Display on Any Fault Armed or Disarmed with Relay Output

Pt Index Number	Description	Pt Index Number	Description
9	Perimeter Instant Alarm on Open or Short, Local while Disarmed	25	Perimeter Delay on Open, Alarm on Short
10	Interior Instant Alarm on Open or Short	26	24-Hour Instant Audible Alarm on Open or Short
11	Interior Delay on Short, Alarm on Open	27	24-Hour Instant Audible Alarm on Open or Short
12	Interior Instant Alarm on Open or Short, Local while Disarmed	28	24-Hour Instant Audible Alarm on Open or Short
13	Interior Follower Delay on Short, Alarm on Open	29	24-Hour Instant Audible Alarm on Open or Short
14	Maintained Keyswitch	30	24-Hour Instant Audible Alarm on Open or Short
15	Momentary Keyswitch	31	24-Hour Instant Audible Alarm on Open or Short
16	Open/Close on Fault		

**Table 6.3** Point Index Numbers and Descriptions**NOTICE!**

**The default indexes are not always the best selection.**

If you experience unwanted trouble conditions, refer to *Table 6.5* on *Page 16* and make any necessary adjustments.

**Bosch Commercial Wireless points produce a Short when faulted and an Open for a tamper.**

To make a custom Point Index, refer to (*Table 6.4* and *Table 6.5*).

Pt Type	Description	Pt Type	Description
0	24-Hour	6	O/C/ Port
1	Perimeter	7	D279 (O/C Non-Priority)
2	Interior	8	D279 (Priority)
3	Interior Follower	9	Easikey
4	Keyswitch	11	AUX AC Supervision
5	Keyswitch Memory		

**Table 6.4** Point Type Selections**NOTICE!**

The selections in *Table 6.5* indicate:

- D = Delayed Response
- I = Instant Alarm
- S = Supervisory
- T = Trouble
- Blank = No Response

To make a custom point index, use *Table 6.4* on *Page 15* and *Table 6.5* on *Page 16*. For example, to create an Interior Follower point with a delay on Open and Trouble on Short, use Point Type 3 and Point Response 5.

Point Response Selections*		0	1	2	3	4	5	6	7	8	9	A	B	C	D	E	F
Armed	Open	I	I	I	I	D	D	I	I	D	I	I	I	I	I	T	
	Short	I	I	I	I	I	I	D	D	D	I	I	I	I	I	I	
Disarmed	Open		T		T				T		I	I	T	I		T	
	Short			T	T		T				I	T	I		I		
24-Hour	Open	I	T	I	T			I	T	S	T	S		S		N/A	
	Short	I	I	T	T	I	T			T	S		S	S			

**Table 6.5** Point Response Selections



## 7 Add System Users Locally With a Keypad

### 7.1 Add Users (CMD 56) Using a Keypad

Step	Operator Entry	Keypad Response
1	Enter Command 56	Enter Passcode
2	Enter passcode and press [ENT].	Enter User #
3	Enter the user number and press [ENT].	USER # (default name text)
4	Enter	Change Passcode?
5	Enter	Enter New Code
6	Enter the new user's passcode.	Enter New Again
7	Re-enter the new passcode.	Code Changed

**Table 7.1** Adding Users with Command 56

### 7.2 Add Card (CMD 56) for Access Control Only Using a Keypad

Step	Operator Entry	Keypad Response
1	Command 56	Enter Passcode
2	Enter passcode and press [ENT]	Enter User #
3	Enter the user number and press [ENT]	USER# (default name text)
4	Enter	Change Passcode?
5	Next	Add Card?
6	Enter	Present Card
7	Present the credential to the reader.	Card Added

**Table 7.2** Adding Cards with Command 56



#### NOTICE!

To use Add Card (CMD 56), you must program the Assign Door prompt within Command Center Assignments with the D9210B door controller number. If you do not program the Assign Door prompt, the keypad reads 9210 NOT READY.

## 8 Turning the System ON or OFF and Keypad Commands

### 8.1 Arming and Disarming the System

#### 8.1.1 Master Arming

Enter the passcode and [ENTER] to arm all areas where the user has authority and are areas within the scope of the keypad.

#### 8.1.2 Disarming

Enter the passcode and [ENTER] to disarm all areas where the user has authority and are areas within the scope of the keypad.

#### 8.1.3 Set Duress +1 Using a D5200 or RPS

1. Go to **PANEL WIDE PARAMETERS (GV2MAIN)→Miscellaneous→Duress Type**. Select **1**.
2. Go to **AREA WIDE PARAMETERS (GV2MAIN)→Area Parameters→Duress Enable**. Select **YES**.
3. Go to **User Interface→Authority Levels**. In the authority levels to be used, select **E** for the **Send Duress** parameter.

### 8.2 Basic and Advanced Commands

Basic Commands	Advanced Commands
CMD 1 (Master Arm) [Master Arms only the area assigned to the Keypad]	CMD 0 (Bypass a Point)
CMD 11 (Master Arm Instant)	CMD 00 (Unbypass a Point)
CMD 3 (Perimeter Delay)	CMD 41 (Test Report)
CMD 4 (Silence Trouble Sounder)	CMD 42 (Status Report)
CMD 4, 0 (View memory)	CMD 43 (Remote Program)
CMD 4, 4 (Walk Test)	CMD 45 (Change Time/Date)
CMD 4, 7 (Reset Sensors)	CMD 49 (Change Display)
CMD 6 (Watch Mode)	CMD 50 (Move to Area)
CMD 7 (Special Alert)	CMD 51 (Extend Closing)
CMD 8 (Perimeter Partial)	CMD 52 (Change Sked)
CMD 9 (Special Alert)	CMD 53 (Delete Passcode)
CMD 2 Perimeter Instant	CMD 54 (Change Relay)
	CMD 55 (Change Passcode)
	CMD 56 (Add Passcode)
	CMD 58 (Fire Test)
	PRINT LOG (99 [ENTER])
	VIEW LOG (99 [ENTER])

**Table 8.1** Basic and Advanced Commands

#### 99 Enter Commands

For each of the following commands, press [9] [9] [ENTER]. Press [NEXT] to view each command.

- 1 - View Log
- 2 - Print Log
- 3 - Display Revision
- 4 - Service Walk
- 5 - Default Text

## 8.3 SIA CP-01 False Alarm Prevention Options



### NOTICE!

Some programming parameters are preset for compliance with SIA standard CP-01 (false alarm prevention). These settings are in **AREA WIDE PARAMETERS (GV2MAIN)→Area Parameters**. They affect control panel operation as described below.

- **Master Arm-No Exit=YES:** This setting provides for a Perimeter Delay point to be faulted when master arming each area, or the arming state defaults to Perimeter Delayed.
- **Exit Delay Warning=YES:** When this parameter is set to YES, the alarm bell pulses on and off every two seconds for the remaining 10 sec of Exit Delay.
- **Entry Delay Warning=YES:** When this parameter is set to YES, the alarm bell pulses on and off every two seconds for the remaining 10 sec of Entry Delay.

## 9 Setting DIP Switches

### 9.1 D9127 U/T POPIT Dip Switch Key

POPIT addresses are binary. Refer to *Table 9.1*:

<b>Switch Number</b>	0	1	2	3	4	5	6
<b>Binary Value</b>	64	32	16	8	4	2	1

**Table 9.1** POPIT Dip Switch Keys

To calculate the switch settings for POPITS, you must determine the value to use in the calculation. For addresses 9 through 127, subtract 9. For addresses 129 through 247, subtract 129. Use the following procedure with address 48 as the example, substituting the actual values in your calculation.

1. Subtract 9 from 48. The result is 39.
2. Set the switches that add up to 39 to the OFF positions ( $32 + 4 + 2 + 1 = 39$ ).  
 SW 1 OFF = 32  
 SW 4 OFF = 4  
 SW 5 OFF = 2  
 SW 6 OFF = 1

### 9.2 D9210B Switch Settings

For additional information, refer to the *Access Control Interface Module D9210B Operation and Installation Guide* (P/N: 32206).

### 9.3 D720, D1255, D1260 Dip Switch Settings

For additional information, refer to:

- *D720 Series Keypads Installation Instructions* (P/N: 7406918000)
  - *D1255/D1255B Keypads Installation Instructions* (P/N: 7406819000)
- or
- *D1260/D1260B Keypads Installation Guide* (P/N: 48101)

### 9.4 D9131A Dip Switch Settings

For additional information, refer to the *Parallel Printer Interface D9131A Installation Guide* (P/N: F01U135506).

### 9.5 D8129 OctoRelay Dip Switch Settings

For additional information, refer to the *D8129 OctoRelay Module Operating and Installation Guide* (P/N: F01U036302).

### 9.6 D8128C OctoPOPIT Dip Switch Settings

For additional information, refer to the *D8128C OctoPOPIT Module Operating Instructions* (P/N: 7407710000).

### 9.7 D8128D OctoPOPIT Dip Switch Settings

For additional information, refer to the *D8128D OctoPOPIT Module Installation Guide* (P/N: F01U070537).

## 10 Reporting Format Definitions

Modem IIIa <sup>2</sup> Event	Modem IIIa <sup>2</sup> Code D6500 Mode	Modem IIIa <sup>2</sup> Code Bosch SIA Mode	Contact ID Event	Contact ID Code
A point supervisory condition occurred	Jsppp	NriaBSppp	24 hour Non-Burglary	1 150 00 000
A valid local access occurred	RsF01	NLS	Successful Download/Access	1 412 00 000
A valid remote access callback occurred	RsssF	NphhhRS	Successful Download/Access	1 412 00 000
A valid remote access occurred	RsssF	NRS	Successful Download/Access	1 412 00 000
AC Fail – mains power supply	Pssss	NAT	AC Loss	1 301 00 000
AC Restore – mains power supply	Rsss0	NAR	AC Loss	3 301 00 000
Access Denied – Door Secured	ADsppp	Nria/idiidZppp or Nria/idiid/ ssxDZppp	Access Denied	1 421 aa uuu
Access Denied – Interlocked	ADsppp	Nria/idiidWppp or Nria/idiid/ ssxDWppp	Access Denied	1 421 aa uuu
Access Denied – No rights in area by card	ADsppp	Nria/idiidVppp or Nria/idiid/ ssxDVppp	Access Denied	1 421 aa uuu
Access Denied – Unknown ID	ADsppp	NriaDDppp	Access Denied	1 421 aa uuu
Access Granted	AGsppp	Nria/idiidGppp or Nria/idiid/ ssxDGppp	Access Report by User	1 422 aa uuu
Alarm	Asppp	NriaBAppp	Burglary	1 130 aa ppp
Alarm Cross Point	Asppp	NriaBMppp	Burglary	1 130 aa ppp
Alarm Exit Error	Asppp	Nria/idiidEAppp	Entry/Exit	1 134 aa ppp
Alarm with Recent Closing	Asppp	Nria/CRppp	Entry/Exit	1 459 aa uuu
All SDI devices are missing, power is shorted	TssdD	NpidddET	Expansion Module Failure	1 333 00 000
All SDI devices are restored, power is normal	RssdD	NpidddER	Expansion Module Failure	3 333 00 000
An individual SDI device is missing.	TssdD	NpidddEM	Expansion Module Failure	1 333 00 000
An individual SDI device is restored.	RssdD	NpidddEN	Expansion Module Failure	3 333 00 000
An invalid remote access callback occurred	TssdF	NphhhRU	Unsuccessful Access	1 413 00 000
An invalid remote access occurred	TssdF	NRU	Unsuccessful Access	1 413 00 000
Armed perimeter delay	Csiii	Nria/idiidNL	Armed STAY	3 441 aa uuu
Armed perimeter instant	Csiii	Nria/idiidNL	Armed STAY	3 441 aa uuu
Bypass by Remote	Nsppp	NriaUBppp	Zone/Sensor Bypass	1 570 aa ppp
Bypass by SDI device	Nsppp	Nria/pidddUBppp	Zone/Sensor Bypass	1 570 aa ppp
Bypass by Sked	Nsppp	Nria/aikkkUBppp	Zone/Sensor Bypass	1 570 aa ppp
Bypass by User	Nsppp	Nria/idiidUBppp	Zone/Sensor Bypass	1 570 aa ppp
Bypass Point	Nsppp	NriaUBppp	Zone/Sensor Bypass	1 570 aa ppp

<b>Modem IIIa<sup>2</sup> Event</b>	<b>Modem IIIa<sup>2</sup> Code D6500 Mode</b>	<b>Modem IIIa<sup>2</sup> Code Bosch SIA Mode</b>	<b>Contact ID Event</b>	<b>Contact ID Code</b>
Checksum failure on configuration memory	TsD15	NYF	RAM Checksum Bad	1 303 00 000
Closing by Area	Csiii	Nria/idiIII CL	O/C by User	3 401 aa uuu
Closing Early by Area	Csiii	Nria/idiIII CK	Early O/C	3 451 aa uuu
Closing Late by Area	Csiii	Nria/idiIII CJ	Late O/C	3 452 aa uuu
Communication failure by route group	TsB01	NrggYC	Failure to communicate event	1 354 00 000
Communication failure by route group restored	NsB01	NrggYK	Failure to communicate event	3 354 00 000
Communication trouble by network	TsB01	Nrgg/piddddYS	Communication Trouble	1 350 00 000
Communication trouble by network restored	NsB01	Nrgg/piddddYK	Communication Trouble	3 350 00 000
Communication trouble by phone	TsB01	NphhhYS	Communication Trouble	1 350 00 000
Communication trouble by phone restored	NsB01	NphhhYK	Communication Trouble	3 350 00 000
Control panel battery low	Tsss9	NYT	Low System Battery	1 302 00 000
Control panel battery missing	Tsss9	NYM	Battery Missing/Dead	1 311 00 000
Control panel battery restored to normal	Rsss9	NYR	Low System Battery	3 302 00 000
Create Status Report	Sssss	NYY	Status Report to Follow	1 605 00 000
Date changed – no user identified	NsD07	NJD	Time/Date Reset	1 625 00 000
Dated changed by user	NsD07	NidiiiJD	Time/Date Reset	1 625 00 uuu
Door Closed, Restoral	Rsppp	NriaDHppp	Access Door propped open	1 426 aa ppp
Door Left Open Alarm	Asppp	NriaDLppp	Access Door propped open	1 426 aa ppp
Door Left Open Trouble	Tsppp	NriaDMppp	Access Door propped open	1 426 aa ppp
Duress	Dsiii	Nria/idiIII HA	Duress	1 121 aa uuu
Event Log Overflow	AsD01	NJO	Event Log Overflow	1 624 00 000
Event Log Threshold has been reached	TsD01	NJL	Event Log 90% Full	1 623 00 000
Extend Close Time	TsD26	Nria/idiIII / tihhmmCE	Auto-arm Time Extended	1 464 aa uuu
Extra Point	Tsppp	NriaXEppp	Maintenance Alert	1 393 aa ppp
Fail To Close by Area	TsssE	NriaCI	Failed to Close	1 454 aa 000
Fail To Open by Area	TsssE	NriaOI	Failed to Open	1 453 aa 000
Fire Alarm	Fsppp	NriaFAppp	Fire	1 110 aa ppp
Fire Cancel	\siii	Nria/idiIII FC	Cancel	1 406 aa ppp
Fire Missing	Msppp	NriaFYppp	Fire Trouble	1 373 aa ppp
Fire Restoral from Alarm	Hssppp	NriaFHppp	Fire	3 110 aa ppp
Fire Restoral from Trouble	Hsppp	NriaFJppp	Fire Trouble	3 373 aa ppp
Fire Supervision	Esppp	NriaFSppp	Fire Supervisory	1 200 aa ppp
Fire Supervision from Restore	Esppp	NriaFVppp	Fire Supervisory	3 200 aa ppp
Fire Trouble	Gssppp	NriaFTppp	Fire Trouble	1 373 aa ppp
Fire Walk Test End	RsssF	Nria/idiIII FK	Fire Test	3 604 aa uuu
Fire Walk Test Start	TsssF	Nria/idiIII FI	Fire Test	1 604 aa uuu
Force Armed Perimeter Delay	Csiii	Nria/idiIII NF	Partial Arm	3 456 aa uuu

<b>Modem IIIa<sup>2</sup> Event</b>	<b>Modem IIIa<sup>2</sup> Code D6500 Mode</b>	<b>Modem IIIa<sup>2</sup> Code Bosch SIA Mode</b>	<b>Contact ID Event</b>	<b>Contact ID Code</b>
Force Armed Perimeter Instant	Csiii	Nria/idiiniNF	Partial Arm	3 456 aa uuu
Forced Close Early by Area	Csiii	Nria/idiiniCF	Early O/C	3 451 aa uuu
Forced Close Late by Area	Csiii	Nria/idiiniCF	Late O/C	3 452 aa uuu
Forced Closing by Area	Csiii	Nria/idiiniCF	O/C by user	3 401 aa uuu
Forced Point	Tsppp	NriaXWppp	Zone/Sensor Bypass	1 570 aa ppp
Invalid local access detected	TsF01	NLU	Unsuccessful access	1 413 00 000
Low battery on a wireless point	Tsppp	NriaXTppp	RF Low Battery	1 384 aa ppp
Low battery restore on a wireless point	Rsppp	NriaXRppp	RF Low Battery	3 384 aa ppp
Missing Alarm	Msppp	NriaUZppp	General Alarm	1 140 aa ppp
Missing Fire Supervision	GMsppp	NriaFZppp	Fire Trouble	1 200 aa ppp
Missing Supervision	MTsppp	NriaBZppp	Loss of Supervision - RPM	1 382 aa ppp
Missing Trouble	Vsppp	NriaUYppp	Loss of Supervision - RPM	1 382 aa ppp
Non- Fire Cancel Alarm	\siii	Nria/idiiniBC	Cancel	1 406 aa ppp
Normal start-up of the control panel	NsD14	NRR	System Reset	1 305 00 000
Opening by Area	Osiii	Nria/idiiniOP	O/C by user	1 401 aa uuu
Opening Early by Area	Osiii	Nria/idiiniOK	Early O/C	1 451 aa uuu
Opening Late by Area	Osiii	Nria/idiiniOJ	Late O/C	1 452 aa uuu
Parameters changed by RPS	NsD02	NYG	Panel Programming Changed	1 306 00 000
Phone Line Missing (1 or 2)	TsssB	NLT1 or NLT2	Telco 1 Fault	1 351 00 000
Phone Line Restored (1 or 2)	RsssB	NLR1 or NLR2	Telco 1 Fault	3 3515 00 000
Point Bus Fail	TsssD	NET	Protection Loop	1 370 00 000
Point Bus Restoral, power normal or bus not missing	RsssD	NER	Protection Loop	3 370 00 000
RAM Fail with RPS	TsF02	NRA	Unsuccessful access	1 413 00 000
Relay Reset by Programmer	NsD22	NpiddRORrr	Sounder/Relay	3 320 00 000
Relay Reset by Remote	NsD24	NROrrr	Sounder/Relay	3 320 00 000
Relay Reset by Sked	NsD20	NaikkkRORrr	Sounder/Relay	3 320 00 000
Relay Reset by User	NsD18	NidiiiRORrr	Sounder/Relay	3 320 00 000
Relay Set by Programmer	NsD21	NpiddRCrrr	Sounder/Relay	1 320 00 000
Relay Set by Remote	NsD23	NRCrrr	Sounder/Relay	1 320 00 000
Relay Set by Sked	NsD19	NaikkkRCrrr	Sounder/Relay	1 320 00 000
Relay Set by User	NsD28	NidiiiRCrrr	Sounder/Relay	1 320 00 000
Remote Reset – System was reset by RPS	NsD11	NRN	System Reset	1 305 00 000
Restoral	Rsppp	NriaBRppp	Sensor Trouble	3 380 aa ppp
Restoral from Alarm	Rsppp	NriaBHppp	Burglary	3 130 aa ppp
Restoral from Ground Fault	Rsppp	NriaBRppp	Ground Fault	3 310 aa ppp
ROM Checksum Fail (Not Used)	AsD12	NYX	ROM Checksum bad	1 304 00 000
Sensor Reset	NsD27	Nria/idiiniXlrrr	Sounder/Relay	3 320 00 000
Service Walk Test End	RsssF	NidiiiTE	Service On/Off Premises	3 466 aa uuu

<b>Modem IIIa<sup>2</sup> Event</b>	<b>Modem IIIa<sup>2</sup> Code D6500 Mode</b>	<b>Modem IIIa<sup>2</sup> Code Bosch SIA Mode</b>	<b>Contact ID Event</b>	<b>Contact ID Code</b>
Service Walk Test Start	TsssF	Nria/idiitiS	Service On/Off Premises	1 466 aa uuu
Sked Changed – No User Identified	NsD06	NaikkkJS	Schedule Change	1 630 00 000
Sked Changed by User	NsD06	Nidiii/aikkkJS	Schedule Change	1 630 00 000
Sked Changed Remotely	NsD06	Nid255/aikkkJS	Schedule Change	1 630 00 000
Swinger Bypass	Nsppp	NriaUBppp	Swinger Bypass	1 575 aa ppp
Test Report – System Normal, Expanded Status	RsssE	NRP & see D6600 CIM for Status Items	Periodic Test Report	1 602 00 000
Test Report – System Normal, Non-expanded Status	RsssE	NRP	Periodic Test Report	1 602 00 000
Test Report – System Off-normal, Expanded Status	RsssE	NRY & see D6600 CIM for Status Items	Periodic Test – System Trouble Present	1 608 00 000
Test Report – System Off-normal, Non-expanded Status	RsssE	NRY	Periodic Test – System Trouble Present	1 608 00 000
Time Changed – No User Identified	NsD07	NJT	Time/Date Reset	1 625 00 000
Time Changed by Receiver Sync	NsD07	Nid254JT	Time/Date Reset	1 625 00 254
Time Changed by User	NsD07	NidiiiJT	Time/Date Reset	1 625 00 uuu
Trouble	Tsppp	NriaBTppp	Sensor Trouble	1 380 aa ppp
Trouble with Ground Fault	Tsppp	NriaBTppp	Ground Fault	1 310 aa ppp
Unverified Event	Ksppp	NriaUGppp	Cross-zone Trouble	1 378 aa ppp
User Alarm 7	Usss7	Nria/idiitiUA	Personal Emergency	1 101 aa uuu
User Alarm 9	UUsss9	Nria/idiitiPA	Duress	1 121 aa uuu
User Passcode Tamper – Too Many Attempts	NsD03	NriaJA	Wrong Code Entry	1 461 aa 000
Walk Test End	RsssF	Nria/idiitiE	Walk test mode	3 607 aa uuu
Walk Test Start	TsssF	Nria/idiitiS	Walk test mode	1 607 aa uuu
Watchdog Reset – SDI Device Reported identifies the Source	NsD09	NpidddYW	System Reset	1 305 00 000

**Table 10.1** Reporting Format Definitions



# 11

## Frequently Asked Questions

**What does it mean when my keypad reads "CALL FOR SERVICE"?**

That keypad is not receiving data from the control panel.

**What does it mean when my keypad reads "SERVICE KEYPAD"?**

A supervised keypad has lost communications with the control panel.

**How do I arm an area that is not assigned to my keypad?**

Add to the **FUNCTION LIST** a menu item with a function code of **1** and with **CC ADDRESS 1-8** set to **YES**, and a menu item with a function code of **2** and with **CC ADDRESS 1-8** set to Yes. Assign the function codes to the necessary command center. The new menu items allow your users to select the area they wish to arm or disarm.

**How do I perform area-specific functions from a keypad?**

Use the **MOVE TO AREA** command (CMD 50) to move to an area within the keypad's scope.

**Can I default a lockcode without knowing the lockcode?**

No. You must send the unit to the Bosch Repair Center.

**How do I upgrade the control panel version?**

Use the supplied firmware upgrade key to upgrade the firmware. Lift the control panel faceplate cover to access the port to insert the upgrade key and read the instructions located on the back of the faceplate.

**How do I add an access card using the command center?**

Use the **ADD USER** command (CMD 56) to add an access card. Present the access card to the assigned door to add the card.

**What does it mean when my keypad reads "9210 NOT READY"?**

No door is assigned to the command center. Check the ASSIGN DOOR parameter within COMMAND CENTER ASSIGNMENTS menu item, and then enter the D9210B address (1 - 8).

**What are SDI addresses 33 to 40?**

They are D9210B addresses.

**What are SKEDS 41 to 56?**

They are Open and Close windows.

**How do I test a relay from the keypad?**

Use the RELAY CONTROL command (CMD 54) to toggle relays.

**How do I toggle the on-board relays A, B, and C?**

Use the RELAY CONTROL command (CMD 54), and then the relay number: 253 for A; 254 for B; and 255 for C.

**How many Amp Hours can the panel sustain?**

You can connect two (2) 18 Ah batteries for a total of 36 Ah. You can gain up to an additional 27 Ah with by connecting a D8132 module.

**Is the control panel compatible with digital or VOIP phone lines?**

The control panel has been tested with only analogue lines. Use a DX4020 to transmit over Ethernet or a ITS-DX4020-G to transmit over cellular. You can use a C900V2 to convert analogue signals to Ethernet for transmission to a D6600 receiver.

**How do I silence a trouble condition?**

Use the SILENCE TROUBLE SOUNDER command (CMD 4) to silence a trouble condition.

**How do I clear alarm memory?**

Ensure all points are normal, and then enter your passcode and press [ESC], or press the [Clear] soft key.

**How do I determine if I have a ground fault?**

On the control panel, measure voltage on terminal 9 (common) and terminal 10 (earth ground). Approximately 6.5 to 6.8 VDC is normal voltage and equals no ground fault. Disconnect wires until you see normal voltage to find your ground.

**Can I add wireless capability to this control panel?**

Yes. Use the Bosch Commercial Wireless Kit (ISW-CWKIT-01) and the proper Bosch Commercial Wireless transmitters to fully integrate wireless on the control panel.

**What type of cable do I use to connect my computer's COM port to a serial-enhanced direct connection using the DX4010i?**

A null modem cable is required.

**How can I determine which points are not ready when my keypad reads "NOT READY TO ARM"?**

Press the NEXT key to scroll through faulted points. If the VIEW POINT STATUS menu item is enabled, you can access it through the menu to determine the state of the faulted point.

**What does it mean when my keypad reads "CHECK DEVICE"?**

A point is faulted. The point is one that is configured to display as a device in the POINT INDEX by marking YES for the DISPLAY AS DEVICE parameter.

**I hear a trouble tone from my keypad but no point is shown as in trouble on the keypad.****How do I resolve this?**

A point generates a trouble tone (buzz) when faulted if it is configured to do so. To determine which points are configured to buzz, look in the POINT INDEX for points with a non-zero value for the BUZZ ON FAULT parameter.

**How can I determine the meaning of an undefined signal received from central station?**

Press 99 [ENTER] on the keypad to reveal the VIEW LOG menu item. Locate the signal in the log by date and time.

**Which reporting formats can the panel send?**

Modem IIIa<sup>2</sup> or Contact ID. BFSK was replaced with Contact ID for the GV3 control panel.

**What is the default Installer Code?**

The code is 123.

**What is the default User Code?**

The code is 123456.

**What is the default RPS Passcode?**

The code is 999999.

**Is the GV3 control panel keypad programmable?**

No. You must program the control panel using the D5200 Series Programmer or RPS version 5.12 or higher.

**What is the phone number to update the D5200 Series Programmer?**

The number is 1-800-657-4584.

**Where can I find free documentation and on-line support for this product?**

Go to [www.boschsecurity.us](http://www.boschsecurity.us).



**Bosch Security Systems, Inc.**

130 Perinton Parkway  
Fairport, NY 14450  
USA

**[www.boschsecurity.com](http://www.boschsecurity.com)**

© Bosch Security Systems, Inc., 2011